

x2

1/4"
(3/4" on outside
for recessed Bolt head)

Pilot

Pilot

x2

↑
finish
the
lines

Pilot

Pilot

Pilot

Pilot

← finish the lines

Tim Sney
2015
P1

4) 3" x 12" x $\frac{3}{4}$ " Thick (Sides + Bottoms)

2) 3" x 5" x $\frac{3}{8}$ " Thick ("Wings") - optional!


1) $1\frac{1}{2}$ " x $2\frac{1}{4}$ " x $\frac{3}{4}$ " Thick (Top Support)

1) $1\frac{1}{2}$ " x $3\frac{3}{4}$ " x $\frac{3}{4}$ " Thick (Bottom middle support)

2) 2" x $3\frac{3}{4}$ " x $\frac{3}{4}$ " Thick (bottom outside supports)

↑
or modify to your specific guitar

USE HARDWOOD (oak, walnut, etc)

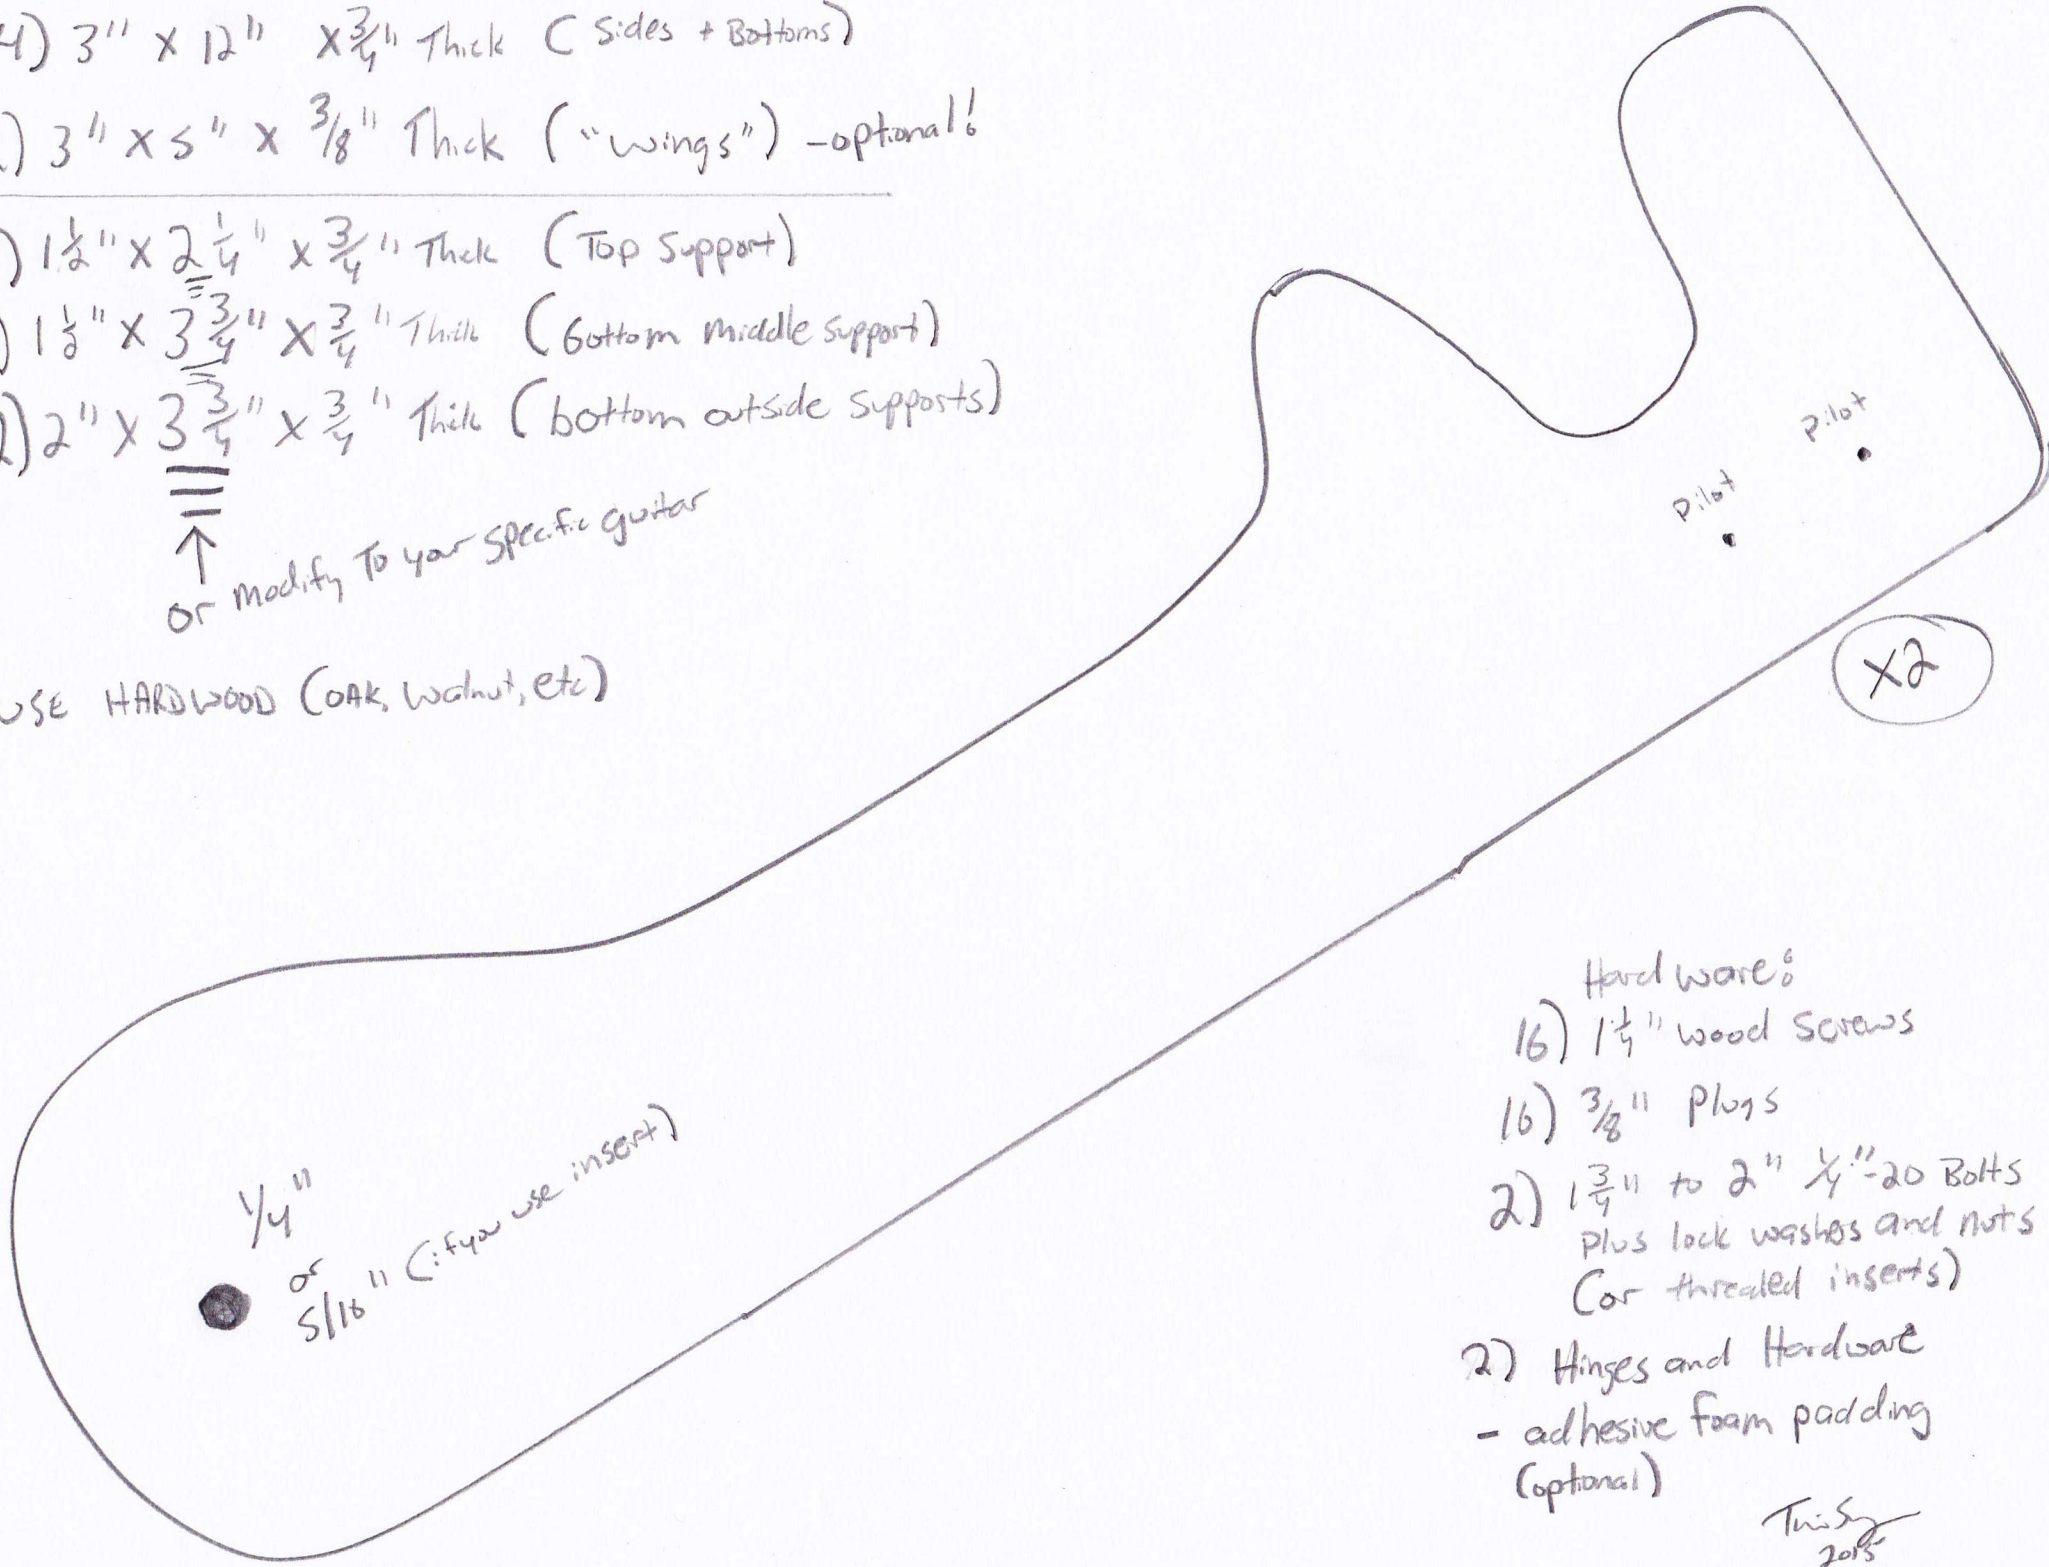

$\frac{1}{4}$ "
or $\frac{5}{16}$ " (if you use insert)

- Hardware:
- 16) $1\frac{1}{4}$ " wood screws
 - 16) $\frac{3}{8}$ " plugs
 - 2) $1\frac{3}{4}$ " to 2" $\frac{1}{4}$ " - 20 Bolts plus lock washers and nuts (or threaded inserts)
 - 2) Hinges and Hardware
 - adhesive foam padding (optional)

Travis
2015
P2